TP Ethernet interfaces

Use Ethernet cables to connect the interfaces ETH 1 to ETH 48 to your PC or a LAN switch.



SFP+ interfaces

Insert suitable SFP modules into the SFP+ interfaces 49 to 52. Choose cables which are compatible with the SFP modules and connect them as described in the module's documentations.





Serial configuration interface (device back side)


Connect the serial configuration interface (CONSOLE) via the included serial configuration cable to the serial interface of the device you want to use for configuring / monitoring the switch.





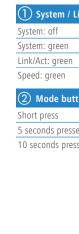

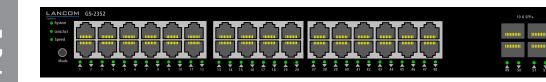

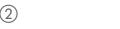



B) TP Ethernet ports

Port inactive

Port inactive

Link 10 Gbps

Link 1 Gbps

Link 1000 Mbps

Link ≤ 100 Mbps





Speed, green	Tott LLD3 show port speed	4 SFP+ ports
② Mode button		Off
Short press	Port LED display switch	Blue
5 seconds pressed	Restart of the device	Green
10 seconds pressed	Reset and restart of the device	_

Power supply	Internal power supply unit (100–240 V, 50-60 Hz)	
Power consumption	Max. 65 W	
Environment	Temperature range 0-40 °C, humidity 10-90 %; non-condensing	
Housing	Robust metal housing, 1 HU with mounting brackets for 19" installation, 442 x 44 x 385 mm (W x H x D)	
Number of fans	2	
Interfaces		
ETH	<ul> <li>48 TP Ethernet ports 10 / 100 / 1000 Mbps</li> <li>4 SFP+ ports 1 / 10 Gbps</li> </ul>	

Doc	aration	of Con	formite
Dec	laration	or Con	TOTTILLY

Hereby, LANCOM Systems declares that this device is in compliance with Directives 2014/30/EU and 2014/35/EU. The full text of the EU declaration of conformity is available at the following internet address: www.lancom-systems.com/ce/

Serial configuration interface / COM port: 115,000 baud

> 52 concurrent ports in total

kage content	
umentation	Quick Reference Guide (DE/EN), Installation Guide (DE/EN)
unting brackets	Two 19" brackets for rack mounting
les	1 IEC power cord 230 V. 1 serial configuration cable 1.5 m



LANCOM GS-2352

Quick Reference Guide







## Please observe the following when setting up the device

- > The mains plug of the device must be freely accessible.
- > For devices to be operated on the desktop, please attach the adhesive rubber footpads.
- > Do not rest any objects on top of the device and do not stack multiple devices.
- > Keep the ventilation slots on the side of the device clear of obstruction.
- > Mount the device into a 19" unit in a server cabinet using the provided screws and mounting brackets.

