
SECURE. NETWORKS.



1

LANCOM GS-2352P Quick Reference Guide

8
Cloud-ready

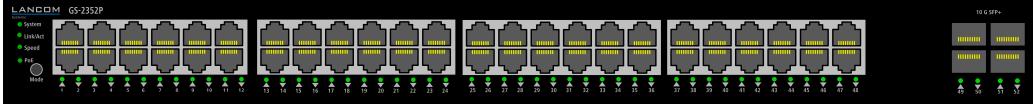



(1)

(2)

TP Ethernet interfaces

your PC or a LAN switch.

SFP+ interfaces

Use Ethernet cables to connect the interfaces ETH 1 to ETH 48 to

Insert suitable SFP modules into the SFP+ interfaces 49 to 52.

Choose cables which are compatible with the SFP modules and

connect them as described in the module's documentations.

Please observe the following when setting up the device > The mains plug of the device must be freely accessible.

- > For devices to be operated on the desktop, please attach the adhesive rubber footpads.

Connect the serial configuration interface (CONSOLE) via the included serial configuration cable to the serial interface of the device you want to use for configuring / monitoring the switch.

Power connector (device back side) Supply power to the device via the power connector. Please use the IEC power cable supplied or a country-specific LANCOM Power Cord.

2

>



(3)

(1)(2)

① System / Link/Act / Speed / PoE		
System: off	Device powered off	
System: green	Device operational	
Link/Act: green	Port LEDs show link / activity status	
Speed: green	Port LEDs show port speed	
PoE: green	Port LEDs show PoE status	

Mode button Short press Port LED display switch 5 seconds pressed Restart of the device 10 seconds pressed Reset and restart of the device

③ TP Ethernet ports			
Dff	Port inactive		
Green	Link 1000 Mbps		
Drange	$Link \le 100 Mbps$		
4 SFP+ port	S		
Off	Port inactive		
Blue	Link 10 Gbps		
Green	Link 1 Gbps		

4

Hardware	
Power supply	Internal power
Power consumption	Max. 500 W
Environment	Temperature ra
Housing	Robust metal h 442 x 44 x 385
Number of fans	3
Interfaces	
ETH	> 48 TP Ether
	> 4 SFP+ port
	> 52 concurre
Console	Serial configura
Declaration of Cont	ormity
Hereby, LANCOM Syst The full text of the EU www.lancom-systems	declaration of con

Quick Referer
Two 19" brac
1 IEC power of

Serial configuration interface (device back side)



> Do not rest any objects on top of the device and do not stack multiple devices. > Keep the ventilation slots on the side of the device clear of obstruction.

> Mount the device into a 19" unit in a server cabinet using the provided screws and mounting brackets.

r supply unit (100–240 V, 50-60 Hz), PoE based on IEEE 802.3af and IEEE 802.3at

range 0–40 °C, humidity 10–90 %; non-condensing housing, 1 HU with mounting brackets for 19" installation, 5 mm (W x H x D)

ernet ports 10 / 100 / 1000 Mbps orts 1 / 10 Gbps rent ports in total

ation interface / COM port: 115,200 baud

at this device is in compliance with Directives 2014/30/EU and 2014/35/EU. conformity is available at the following internet address:

ence Guide (DE/EN), Installation Guide (DE/EN)

ckets for rack mounting

cord 230 V, 1 serial configuration cable 1.5 m