



# LANCOM R883+ Quick Reference Guide

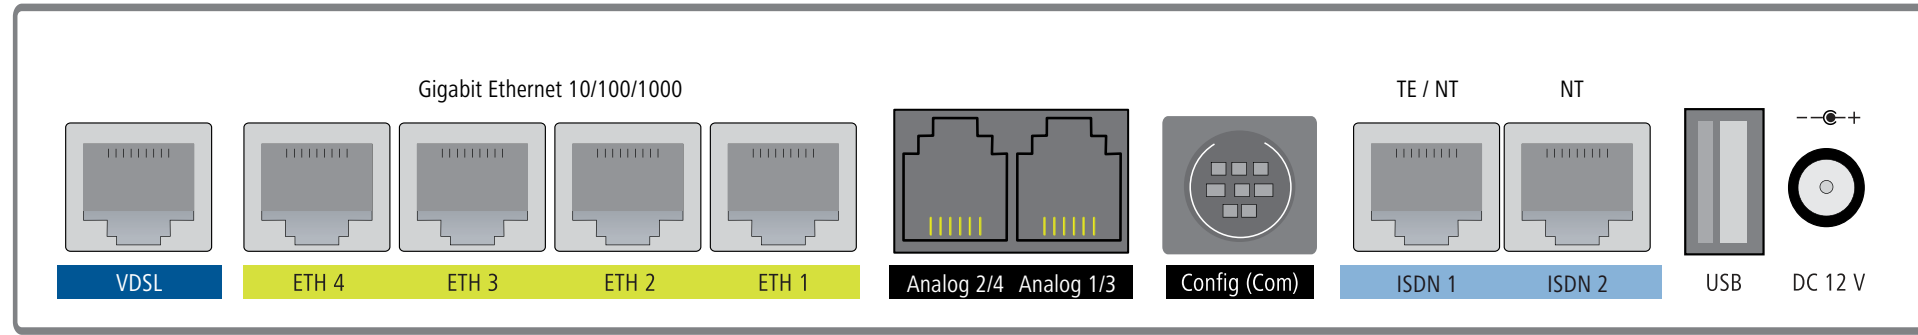

- ① **VDSL interface**  
Use the supplied DSL cable for the IP-based line to connect the VDSL interface and the provider's telephone socket. For more information, please contact your Internet service provider.
- ② **Ethernet interfaces**  
Use the cable with the kiwi-colored connectors to connect one of the interfaces ETH 1 to ETH 4 to your PC or a LAN switch.
- ③ **Analog interfaces**  
Connect analog terminal devices to the analog interfaces either directly via RJ11, or with the help of the enclosed TAE adapters, either directly or via the additionally enclosed RJ11 twin adapters. The RJ11 twin adapters are wired as listed below when looking into the ports with contacts at the bottom:  
connected to router port 1/3: port 1 left, port 3 right,  
connected to router port 2/4: port 2 left, port 4 right
- ④ **Configuration interface**  
Use a serial configuration cable to connect the serial interface (COM) to the serial interface of the device you want to use for configuring / monitoring (separately available).

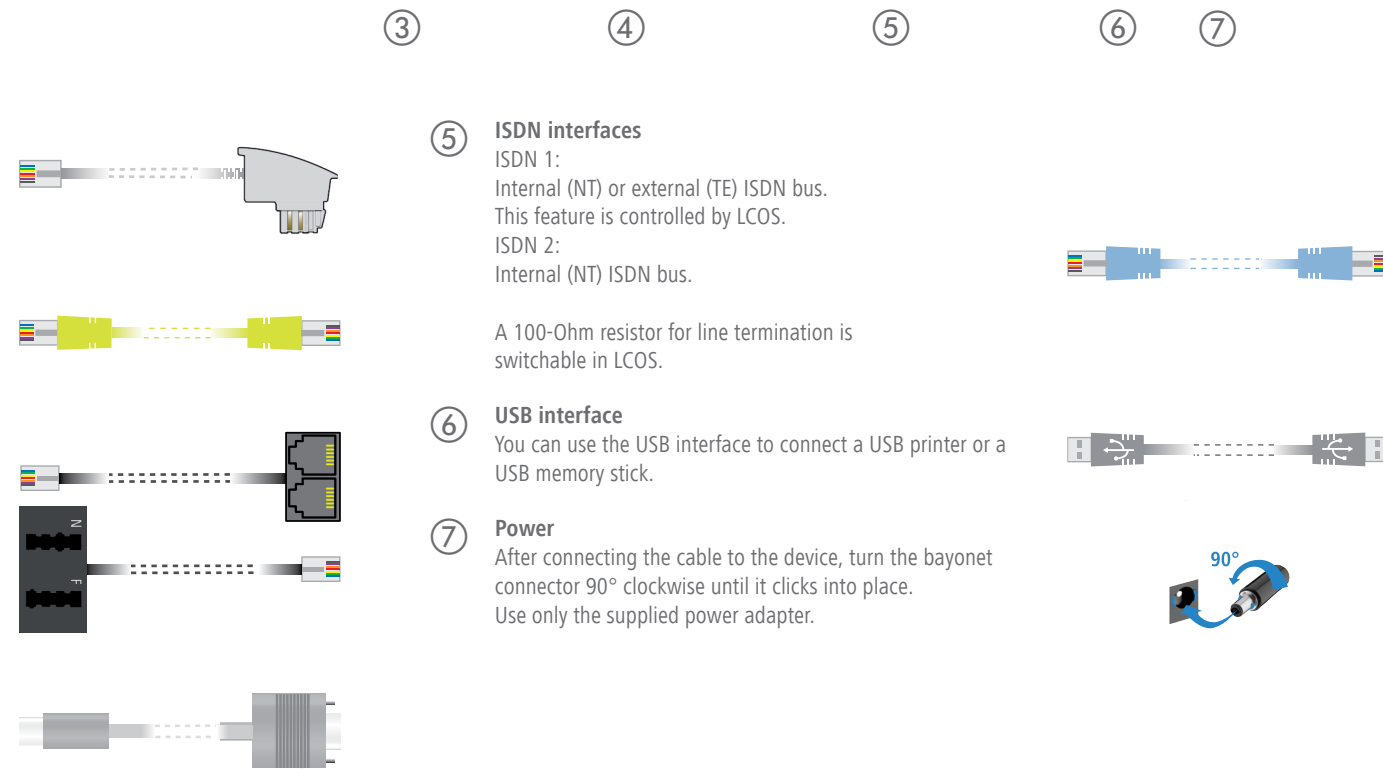

- ⑤ **ISDN interfaces**  
ISDN 1:  
Internal (NT) or external (TE) ISDN bus. This feature is controlled by LCOS.  
ISDN 2:  
Internal (NT) ISDN bus.  
  
A 100-Ohm resistor for line termination is switchable in LCOS.
- ⑥ **USB interface**  
You can use the USB interface to connect a USB printer or a USB memory stick.
- ⑦ **Power**  
After connecting the cable to the device, turn the bayonet connector 90° clockwise until it clicks into place. Use only the supplied power adapter.



**Please observe the following when setting up the device**

- > Do not rest any objects on top of the device
- > For devices to be operated on the desktop, please attach the adhesive rubber footpads
- > In case of wall mounting, use the drilling template as supplied




- > Keep the ventilation slots on the side of the device clear of obstruction
- > Rack installation with the optional LANCOM Rack Mount (separately available)



**Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide! Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.**

MOUNTING AND CONNECTING THE DEVICE

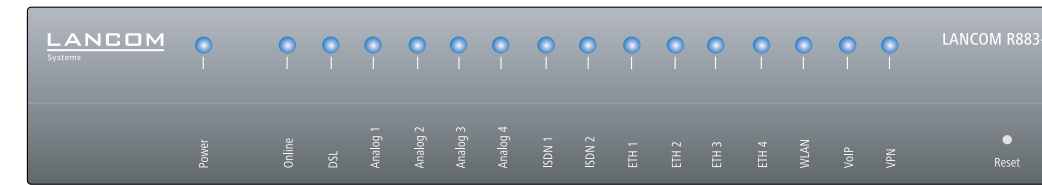

① Power	⑤ ISDN
Off: Device switched off	Off: Interface deactivated
Green, permanently*: Device operational, resp. device paired / claimed and LANCOM Management Cloud (LMC) accessible	Green, permanently: D-channel active
Red / green blinking: Configuration password not set. Without a configuration password, the configuration data in the device is unprotected.	Green, flickering: ISDN data transfer
Red blinking: Charge or time limit reached	Red, flickering: ISDN transfer error
1x green inverse blinking*: Connection to the LMC active, pairing OK, device not claimed	Red / orange, blinking: ISDN hardware error
2x green inverse blinking*: Pairing error, resp. LMC activation code not available	
3x green inverse blinking*: LMC not accessible, resp. communication error	
② Online	⑥ ETH
Off: WAN connection inactive	Off: No networking device attached
Green, permanently: WAN connection active	Green, permanently: Connection to network device operational, no data traffic
Red, permanently: WAN connection error	Green, flickering: Data transmission
③ DSL	⑦ WLAN
Off: Interface deactivated	Off: No Wi-Fi network defined or Wi-Fi module deactivated. The Wi-Fi module is not transmitting beacons.
Green, permanently: DSL connection active	Green, permanently: At least one Wi-Fi network is defined and Wi-Fi module activated. The Wi-Fi module is transmitting beacons.
Green, flickering: DSL data transfer	Green, blinking: DFS scanning or other scan procedure
Red, flickering: DSL transfer error	
Red / orange, blinking: DSL hardware error	
Orange, blinking: DSL training	
Orange, permanently: DSL sync	
Green, blinking: DSL connecting	
④ Analog	⑧ VoIP
Off: Interface deactivated	Off: No SIP accounts defined or VCM is off
Green, permanently: Interface activated	Green, permanently: All defined and active SIP accounts (outgoing) were successfully registered
Orange, blinking: Incoming call	Red, permanently: Not all defined and active SIP accounts were registered (possibly still in process)
Green, blinking: Connection active	Red or green, inverse flashing: Number of currently used lines (connecting or connected)
	⑨ VPN
	Off: VPN connection inactive
	Green, permanently: VPN connection active
	Green, flashing: VPN connecting
	⑩ Reset
	Reset button: Operated e.g. with a paper clip
	> short press: Restart the device
	> long press: Reset the device

\*) The additional power LED statuses are displayed in 5-seconds rotation if the device is configured to be managed by the LANCOM Management Cloud.

Hardware	
Power supply	12 V DC, external power adapter (230 V); bayonet connector to secure against disconnection
Power consumption	Max. ca. 18 W
Environment	Temperature range 0–40 °C; humidity 0–95 %; non-condensing
Housing	Robust synthetic housing, rear connectors, ready for wall mounting, Kensington lock; measures 210 x 45 x 140 mm (W x H x D)
Number of fans	One quiet fan

Interfaces	
WAN: VDSL2	> VDSL2 as per ITU G.993.2; profiles 8a, 8b, 8c, 8d, 12a, 12b, 17a, 35b > VDSL2 vectoring as per ITU G.993.5 (G.vector) > Compatible to VDSL2 from Deutsche Telekom > VDSL Supervectoring as per ITU G.993.2 (Annex Q) > Compatible to U-R2 from Deutsche Telekom (1TR112) > ADSL2+ over ISDN as per ITU G.992.5 Annex B/J with DPBO, ITU G.992.3, and ITU G.992.1 > Supports just one virtual connection at a time in ATM (VPI-VCI pair)
Wi-Fi	> Frequency band: 2400-2483.5 MHz (ISM) or 5150-5825 MHz (restrictions vary between countries) > Radio channels 2.4 GHz: Up to 13 channels, max. 3 non-overlapping (2.4-GHz band) > Radio channels 5 GHz: Up to 26 non-overlapping channels (channels available vary according to country regulations; DFS for automatic dynamic channel selection required)
ETH	4 individual ports, 10 / 100 / 1000 Mbps Gigabit Ethernet, by default set to switch mode. Up to 3 ports can be operated as additional WAN ports. Ethernet ports can be electrically disabled in the LCOS configuration.
USB	USB 2.0 hi-speed host port for connecting USB printers (USB print server), serial devices (COM-port server) or USB drives (FAT file system)
ISDN 1 / ISDN 2	ISDN 1: Internal (NT) or external (TE) ISDN bus. This feature is controlled by LCOS. According to the settings, connect the light-blue ISDN cable either to the NTBA or the ISDN terminal device. ISDN 2: Internal (NT) ISDN bus. Use the light-blue ISDN cable to connect the ISDN device to the ISDN interface.
Analog 1 / Analog 2 Analog 3 / Analog 4 Config (Com) / V.24	Use the cable of your analog devices to connect them with the analog interfaces. If necessary, use the enclosed adapter.  Serial configuration interface/COM-port (8-pin mini-DIN); 9,600 - 115,200 baud, suitable for optional connection of analog/GPRS modems. Supports internal COM-port server and provides transparent asynchronous serial-data transfer via TCP.

WAN protocols	
VDSL, ADSL, Ethernet	PPPoE, PPPoA, IPoA, Multi-PPPoE, ML-PPP, PPTP (PAC or PNS) and IPoE (with or without DHCP), RIP-1, RIP-2, VLAN
ISDN	DSS1 (Euro-ISDN), PPP, X75, HDLC, ML-PPP, V.110/GSM/HSCSD

**Declaration of Conformity**  
Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuerselen, declares that this radio equipment is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.lancom-systems.com/ce/](http://www.lancom-systems.com/ce/)

Package content	
Manual	Quick Reference Guide (DE/EN); Installation Guide (DE/EN)
Cable	1 Ethernet cable, 3 m (kiwi colored connectors); 1 DSL cable for an IP-based line, 4.25 m; 1 ISDN cable, 3 m (light-blue connectors)
Adapters	4 TAE adapters (RJ11 - TAE), 2 RJ11 twin adapters
Power adapter	External power supply adapter (230 V); NEST 12 V / 2 A DC/5; barrel / bayonet (EU), LANCOM item no. 111303

This product contains separate open-source software components which are subject to their own licenses, in particular the General Public License (GPL). The license information for the device firmware (LCOS) is available on the device's WEBconfig interface under "Extras > License information". If the respective license demands, the source files for the corresponding software components will be made available on a download server upon request.