



Please observe the following when setting up the device

- For devices to be operated on the desktop, please attach the adhesive rubber footpads
- Do not rest any objects on top of the device and do not stack multiple devices



- Keep the ventilation slots on the side of the device clear of obstruction
- In case of wall mounting, use the drilling template as supplied




- Rack installation with the optional LANCOM Rack Mount (not supplied)



LANCOM 1783VAW Quick Reference Guide



LANCOM
Systems

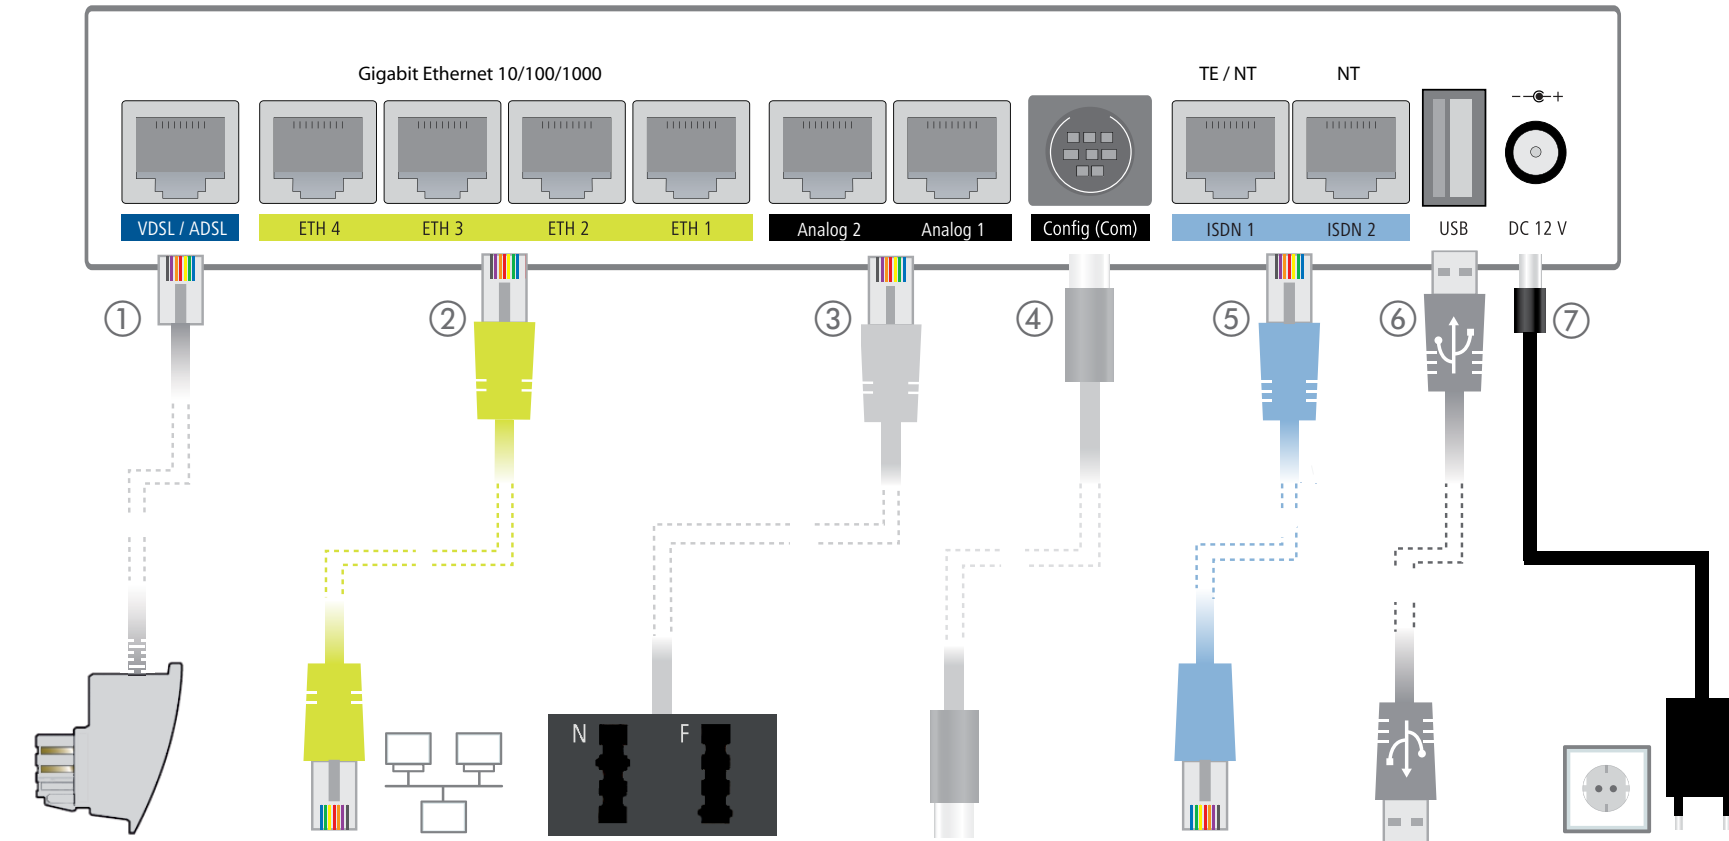


- VDSL / ADSL interface**
Use the supplied DSL cable for the IP-based line to connect the VDSL / ADSL interface and the provider's telephone socket. For more information, please contact your Internet service provider.
- Ethernet interface**
Use the cable with the green-colored connectors to connect one of the interfaces ETH 1 to ETH 4 to your PC or a LAN switch.
- Analog interface**
Connect analog terminal devices to the analog interfaces either directly via RJ11 or with the help of the enclosed TAE adapter.
- Serial interface**
Configuring the device via the serial interface requires a serial configuration cable (available as an accessory).
- ISDN interface**
ISDN 1
Internal (NT) or external (TE) ISDN bus. This feature is controlled by LCOS.

ISDN 2
Internal (NT) ISDN-bus.

A 100-Ohm resistor for line termination is switchable in LCOS.
- USB interface**
You can use the USB interface to connect a USB printer or a USB drive.
- Power**
When connecting the cable to the device, turn the bayonet connector 90° clockwise until it clicks into place.

Use only the supplied power adapter.

MOUNTING AND CONNECTING THE DEVICE

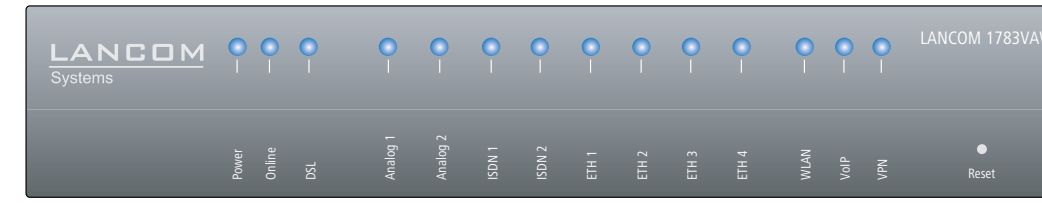

① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩

| ① Power | |
|--------------------------------|---|
| Off | Device switched off |
| Green, permanently* | Device operational, resp. device paired / claimed and LANCOM Management Cloud (LMC) accessible |
| Green/red, blinking | No password set. Without a password the configuration data in the device is unprotected. |
| Red, blinking | Charge or time limit reached |
| 1x green inverse blinking* | Connection to the LMC active, pairing OK, device not claimed |
| 2x green inverse blinking* | Pairing error, resp. LMC activation code not available |
| 3x green inverse blinking* | LMC not accessible, resp. communication error |
| ② Online | |
| Off | WAN connection inactive |
| Green, permanently | WAN connection active |
| Red, permanently | WAN connection error |
| ③ DSL | |
| Off | Interface deactivated |
| Green, permanently | DSL connection active |
| Green, flickering | DSL data transfer |
| Red, flickering | DSL transfer error |
| Red/orange, blinking | DSL hardware error |
| Orange, blinking | DSL training |
| Orange, permanently | DSL sync |
| Green, blinking | DSL connecting |
| ④ Analog | |
| Off | Interface deactivated |
| Green, permanently | Interface activated |
| Orange, blinking | Incoming call |
| Green, blinking | Connection active |
| ⑤ ISDN | |
| Off | Interface deactivated |
| Green, permanently | D-channel active |
| Green, flickering | ISDN data transfer |
| Red, flickering | ISDN transfer error |
| Red/orange, blinking | ISDN hardware error |
| ⑥ ETH | |
| Off | No networking device attached |
| Green, permanently | Connection to network device operational, no data traffic |
| Green, flickering | Data transmission |
| ⑦ WLAN | |
| Off | No Wi-Fi network defined or Wi-Fi module deactivated. The Wi-Fi module is not transmitting beacons. |
| Green, permanently | At least one Wi-Fi network is defined and Wi-Fi module activated. The Wi-Fi module is transmitting beacons. |
| Green, blinking | DFS scanning or other scan procedure |
| ⑧ VoIP | |
| Off | No SIP accounts defined or VCM is off |
| Green, permanently | All defined and active SIP accounts (outgoing) were successfully registered |
| Red, permanently | Not all of the defined and active SIP accounts were registered (possibly still in process) |
| Red or green, inverse flashing | Number of currently used lines (connecting or connected) |
| ⑨ VPN | |
| Off | VPN connection inactive |
| Green, permanently | VPN connection active |
| Green, flashing | VPN connecting |
| ⑩ Reset | |
| Reset switch | Operated e.g. with a paper clip short press > Restart the device long press > Reset the device |

*) The additional power LED statuses are displayed in 5-seconds rotation if the device is configured to be managed by the LANCOM Management Cloud.

| Hardware | |
|--|--|
| Power supply | 12 V DC, external power adapter (230 V); bayonet connector to secure against disconnection |
| Power consumption | Max. ca. 14 W |
| Environment | Temperature range 0–35 °C, humidity 0–95 %; non-condensing |
| Housing | Robust synthetic housing, rear connectors, ready for wall mounting, Kensington lock; measures 210 x 45 x 140 mm (W x H x D) |
| Number of fans | None; fanless design, no rotating parts, high MTBF |
| Interfaces | |
| LANCOM 1783VAW over ISDN / over POTS | |
| WAN: VDSL2 | > VDSL2 as per ITU G.993.2; profiles 8a, 8b, 8c, 8d, 12a, 12b, 17a > Compatible to VDSL2 from Deutsche Telekom AG (only over ISDN) > ADSL conformity according to: ADSL2+ over ISDN as per ITU G.992.5 Annex B/J with DPBO (POTS: Annex A/Annex M), ADSL2 over ISDN as per ITU G.992.3 Annex B (POTS: Annex A/L), ADSL over ISDN as per ITU G.992.1 Annex B (POTS: Annex A) > Supports just one virtual connection at a time in ATM (VPI-VCI pair) |
| Wi-Fi | > Frequency band: 2400-2483.5 MHz (ISM) or 5150-5825 MHz (restrictions vary between countries) > Radio channels 2.4 GHz: Up to 13 channels, max. 3 non-overlapping (2.4-GHz band) > Radio channels 5 GHz: Up to 26 non-overlapping channels (channels available vary according to country regulations; DFS for automatic dynamic channel selection required) |
| ETH | 4 individual ports, 10 / 100 / 1000 Mbps Gigabit Ethernet, by default set to switch mode. Up to 3 ports can be operated as additional WAN ports. Ethernet ports can be electrically disabled in the LCOS configuration. |
| USB | USB 2.0 hi-speed host port for connecting USB printers (USB print server), serial devices (COM-port server) or USB drives (FAT file system) |
| ISDN 1 / ISDN 2 | ISDN 1: Internal (NT) or external (TE) ISDN bus. This feature is controlled by LCOS. According to the settings, connect the light-blue ISDN cable either to the NTBA or the ISDN terminal device. ISDN 2: Internal (NT) ISDN bus. Use the light-blue ISDN cable to connect the ISDN device to the ISDN interface; |
| Analog 1 / Analog 2 | Use the cable of your analog devices to connect them with the analog interfaces. If necessary, use the enclosed adapter. |
| Config (Com) / V.24 | Serial configuration interface / COM-port (8-pin mini-DIN): 9,600 - 115,200 baud, suitable for optional connection of analog/GPRS modems. Supports internal COM-port server and provides transparent asynchronous serial-data transfer via TCP. |
| WAN protocols | |
| VDSL, ADSL, Ethernet | PPPoE, PPPoA, IPoA, Multi-PPPoE, ML-PPP, PPTP (PAC or PNS) and IPoE (with or without DHCP), RIP-1, RIP-2, VLAN, GRE, EoGRE, L2TPv2 (LAC or LNS), IPv6 over PPP (IPv6 and IPv4/IPv6 dual stack session), IPv6oE (autoconfiguration, DHCPv6 or static) |
| ISDN | DS51 (Euro-ISDN), PPP, X75, HDLC, ML-PPP, V.110/GSM/HSCSD |
| Declaration of Conformity | |
| Hereby, LANCOM Systems declares that this radio equipment is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.lancom-systems.com/ce/ | |
| Package content | |
| Manual | Quick Reference Guide (DE/EN), Installation Guide (DE/EN) |
| Cable | 1 Ethernet cable, 3 m (kiwi colored connectors); 1 DSL cable for an IP-based line, 4.25 m; 1 ISDN cable, 3 m (light-blue connectors) |
| Adapters | 2 TAE adapters (RJ11 - TAE) |
| Power adapter | External power supply adapter (230 V); NEST 12 V / 1.5 A DC/S; barrel connector 2.1 / 5.5 mm bayonet; LANCOM Art.-Nr. 111301 (EU, 230 V); LANCOM Art.-Nr. 111302 (UK, 230 V) |

This product contains separate open-source software components which are subject to their own licenses, in particular the General Public License (GPL). The license information for the device firmware (LCOS) is available on the device's WEBconfig interface under "Extras > License information". If the respective license demands, the source files for the corresponding software components will be made available on a download server upon request.